




## Installation instructions

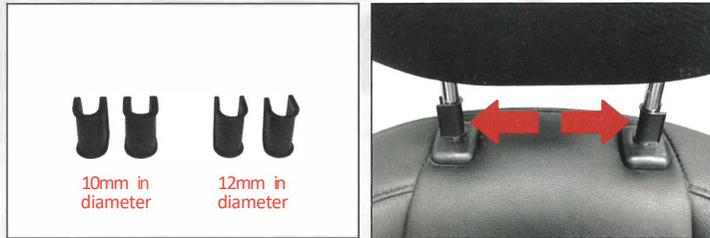

1. Select the appropriate pair from the two pairs of rubber plugs, and install them on the metal shank of the car headrest to the left and right respectively.

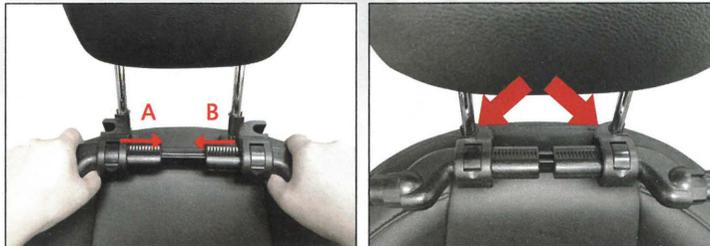

2. Insert the A end of the mounting rod into the B end, and hook the metal rod firmly on the headrest of the car

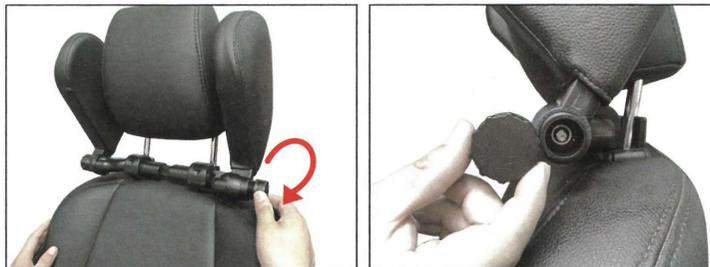

3. Install the left and right wings on both ends of the headrest bracket and tighten the plastic screw cap.

## Need to pay attention :

After installation, the middle distance between the left and right headrest brackets is within 3cm. If it exceeds 3cm, please adjust the hook of the bracket to both ends.

